

G75 Irrigation Controller



USERS GUIDE



TABLE OF CONTENTS

GETTING STARTED	. 1
FEATURES	. 1
PARTS IDENTIFICATION	
BASIC CONTROLLER FUNCTIONS	. 2
INSTALLATION	. 2
MANUAL OPERATION	-
MAKING AN IRRIGATION SCHEDULE	- 3
Irrigation Duration for P1/P2/P3	. 4
P1 Irrigation Schedule Design Table	. 4
P2 Irrigation Schedule Design Table	. 4
P3 Irrigation Schedule Design Table	. 4
PROGRAMMING THE CONTROLLER	. 5
MEANING OF CONTROLLER ICONS	. 5
SETTING THE CLOCK	
SETTING THE IRRIGATION DURATION	- 6
WATERING EVERY DAY AT A SET TIME (P1)	7
Setting the Start Time	. 7
Example	. 8
WATERING ON SELECTED DAYS (P2)	
Setting the Days	9
Example	10
WATERING UP TO THREE TIMES A DAY	
ON SELECTED DAYS (P3)	-11
Setting the Start Times	- 11
Setting up a Second and Third Daily Irrigation	12
Choosing the Days	. 12
Example	
Maintenance and Troubleshooting	. 14
BATTERY INSTALLATION	
OFF SEASON	
TROUBLESHOOTING	.16
Contact and Service Information	. 17
GUARANTEE	.17
CONTACT INFORMATION	-18

Getting Started

Features

- Up to three operations per day
- Battery powered; no need for electrical hookup
- · Easy installation
- · Waterproof and weather resistant
- · Easy programming

Parts Identification



Basic Controller Functions

This section gives a brief description of the Controller buttons. See the following sections for further details.

MODE Button - Quick presses of the MODE button turn the controller off, or turn on a specific program (P1, P2, or P3). Longer presses of the MODE button put the Controller in programming mode.

SET Button - Press the **SET** button to set a function and proceed.

O - Use these buttons to increase and decrease schedule functions.

Installation

- 1. Turn off the main faucet.
- Install the valve in the irrigation system so that the black arrow on the valve is pointing in the direction of the water flow. The Controller may be swiveled around to facilitate installation.
- 3. Occasionally the valve opens in transit. To ensure that the valve is closed before you open the main faucet, first make sure that the Controller is not set to OFF (If it is set to OFF, press briefly on the MODE button to turn it on.) Then press and SET simultaneously to open, and press and SET simultaneously to close, You are now ready to program the Controller.
- 4. Turn on the main faucet.

Manual Operation

To manually open the valve, make sure that the Controller is not set to OFF (If it is set to OFF, press briefly on the **MODE** button), then press \bigoplus and **SET** simultaneously.

The irrigation will continue until the interval defined has passed. If the irrigation duration has been set to zero, the valve will close after one minute.

To stop irrigating, press and **SET** simultaneously.

Making an Irrigation Schedule

If you are planning to water either on selected days only (P2), or up to three times a day on selected days (P3) it is important to make a watering plan before programming the Controller. The plan should list the days you want to water, the number of times you wish to water each day, and at what time you want the watering to start.

Consult this plan while programming the Controller.

Irrigation Duration for P1/P2/P3

Duration Time	
---------------	--

P1 Irrigation Schedule Design table

Start T	ime					
Sun.	Mon.	Tue.	Wed.	Thurs.	Fri.	Sat.
V	V	~	~	~	>	~

P2 Irrigation Schedule Design table

Start T	ime		As s	et in P1			
Sun.	Mon.	Tue.		Wed.	Thurs.	Fri.	Sat.

P3 Irrigation Schedule Design table

			Start 1		1 Start 2		Start 3	
Start Time								
Sun.	Mon.	Т	ue.	Wed	1.	Thurs.	Fri.	Sat.

Programming the Controller


Meaning of Controller Icons



NOTE: Quick presses of the MODE button turns the Controller off, or turns on a specific program (P1, P2 or P3).

Longer presses of the **MODE** button put the Controller in programming mode.

- Irrigating days of the week
- 2. Program starts
- 3. Program #
- 4. Irrigation
- 5. Timing or clock
- 6. Low battery
- 7. Time adjustment

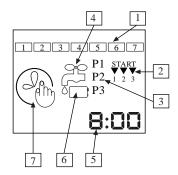



NOTE: You cannot program the controller if it is set to manual operation (Page 3) or if it set to "OFF". To release from manual operation press and SET simultaneously. To release from OFF press briefly on the MODE button.

Controller will revert to operating mode after 30 seconds if no buttons are pressed.

Setting the Clock

If screen is blank, press MODE to activate.

Before programming the controller you must set the clock.

 Press MODE for several seconds until the time adjustment icon appears (The minutes will be flashing):



On this screen the numbers represent the current time.

- 2. Use the and the buttons to adjust the minutes.
- 3. Press SET to continue.
- 4. Use the and the buttons to adjust the hours.
- 5. Press SET to continue.
- 6. Use the and the buttons to select the current day of the week. The selected day will flash.
- 7. Press **SET** to return to operating mode.

Setting the Irrigation Duration

To set duration of all irrigations, you must be in an operating mode (P1, P2, or P3).

1. Press the **MODE** button until the clock setting screen appears, then press **MODE** again until the following screen appears (the minutes will be flashing).



On this screen, the clock numbers refer to the amount of time you wish irrigation to continue.

- 2. Use the and the buttons to adjust the minutes.
- 3. Press SET to continue.
- 4. Use the and the buttons to adjust the hours.
- 5. Press SET to continue.

Watering Every Day at a Set Time (P1)

If you would like to water your garden every day at a constant same time use the **P1** program:

Setting the Start Time

After setting the irrigation duration time, the following screen appears:



On this screen, the clock numbers refer to the time you wish irrigation to begin.

G75 Irrigation Controller

- 1. Use the \bigoplus and the \bigoplus buttons to adjust the minutes
- 2. Press SET to continue.
- 3. Use the \bigoplus and \bigoplus buttons to adjust the hours.
- Press SET to return to operating mode (P1 programming is now complete).

Example

If you wish to irrigate every day at 8:00 in the morning, for 15 minutes: Make sure the clock is set, and you are in an operating mode. Press **MODE** twice to get to the the Duration Time (with the tap). Set the Duration Time to 0:15. Then set the clock (on the following screen with the watch face and tap) to 8:00.

Watering on Selected Days (P2)


If you would like to water your garden on specific days at the same time use **P2** program:



Irrigation duration must be set first. See page 7. **P2** takes the start time directly from **P1**. For instructions on how to set **P1** see page 7.

Setting the Days

 To set the days, press MODE until the clock setting screen appears, then press MODE again until the Duration Time (with tap) appears, then press MODE again until the P1 screen appears, and press once again until the following screen appears:



- Press SET to reach the day you wish to irrigate. The number (corresponding to the day of the week) will flash.
- 3. Press to select that day (the square which appears indicates day is selected).
- Press
 ⊕to deselect a day.
- Press SET until all days are programmed as desired. Current day continues flashing.
- 6. Press **SET** to return to operating mode.

Example

If you wish to irrigate Sunday, Tuesday, Thursday and Saturday at 8:00 in the morning, for 15 minutes: Make sure the clock is set, and you are in an operating mode. Then press **MODE** twice to get to the Duration Time (with tap). Set the duration time to 0:15. Then set the clock (on the following screen with the clock face and tap) to 8:00. Press **MODE** to get to the **P2** screen, then select days 1, 3, 5 and 7.

Watering Up-To Three Times a Day on Selected Days (P3)

If you need to water more, up-to three times a day, on specific days, use the **P3** program.



Duration time must be programmed first. See page 7.

Setting the Start Times

To set start times, you must be in an operating mode (P1, P2, or P3).

 Press MODE until the clock setting screen appears, press MODE again until the Duration Time (with tap) screen appears, press MODE a third time until the P1 screen appears, press again until P2 appears, then press again until the P3 screen appears (The minutes will be flashing).



On this screen, the clock numbers refer to the time you wish the first irrigation (START 1) to begin. The three arrows under START indicate the three different irrigations. As each arrow appears you may program the start time for that particular irrigation.

G75 Irrigation Controller

- 2. Use the \bigoplus and the \bigoplus buttons to adjust the minutes.
- 3. Press **SET** to continue.
- 4. Use the and buttons to adjust the hours.
- Press SET to continue programming. The arrow now appears under START 2.

Setting up a Second and Third Daily Irrigation

Repeat the above steps for setting the start times of the second and third daily irrigations. After completing setting the start times, the number 1 in the upper left corner will flash indicating that you are now ready to choose the days you wish to irrigate.

Choosing the Days

- Press SET to move through the days, and reach the day you wish to irrigate. The number (corresponding to the day of the week) will flash.
- Press to select that day (the square which appears indicates day is selected).
- 3. Press \bigcirc to deselect a day.
- 4. Continue through all the days until day 7 is flashing, then either press SET to return to operating mode or press to select 7 (if desired) and then press SET.

Example


If you wish to irrigate Sunday, Tuesday, Thursday and Friday at 8:00 in the morning, and at noon, and at 15:00 in the afternoon for 3 minutes each time, first make sure the clock is set, and duratio time is set to 0:30. Then press **MODE** until the clock setting screen appears, press **MODE** again until the Duration Time (with tap) screen appears, press **MODE** a third time until the **P1** screen appears, press again until **P2** appears, then press again until the **P3** screen appears (with clock face and tap). Set 1 to 8:00, Start to 12:00, and Start 3 to 15:00. After setting the irrigation start times, the days at the top of the screen will flash. Set 1, 3, 5 then press **SET** when you reach day 7.

Maintenance and Troubleshooting

Battery Installation

Replace the battery at the start of each irrigation season and when the low battery symbol appears.

- Using a Phillips screwdriver, remove the four battery cover screws.
- 2. Remove the battery cover and seal.
- 3. Replace the battery.
- 4. After reattaching the seal, put the cover back, and secure with the four screws.

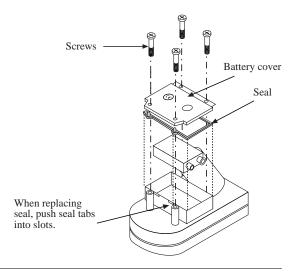

Off Season

During the season when you do not need to water your plants press the **MODE** button quickly until **OFF** is displayed. DO NOT remove the battery. The Controller is equipped with a back-up battery, and removing the main battery for long periods will cause the back-up battery to discharge.

Troubleshooting

PROBLEM	CAUSE	SOLUTION		
Controller does not irrigate plants as desired	Water at main faucet is shut off	Check faucet		
desired	Hose cut or blocked	Replace damaged section		
	Battery dead	Replace battery		
	Controller set on OFF	Set controller to desired program		
	Controller improperly programmed	Check program and clock settings		
Blank display	Battery dead	Replace battery		
	Controller in sleep mode	Press MODE to activate screen		
Water does not turn off	Valve blocked by dirt or scale	Replace valve		
	Valve installed backwards	Install valve so that the arrow points in the direction of the water flow		



Cautions *Do not remove the battery when the Controller is not in use*

Contact and Service Information

Guarantee

Baccara products are guaranteed to be free from defects in material and workmanship for a period of one year from the date of delivery.

This guarantee does nor apply where equipment is not used and installed strictly in accordance with *Baccara* specifications and Users Guide. Neither does it apply to failures caused by lightning strikes or damage due to freezing temperatures or mechanical causes (e.g. lawn mowers). *Baccara* is not liable for indirect, incidental or consequential damage in connection with the use of equipment.

To receive guarantee benefits, customers should return defective units along with the receipt to the nearest *Baccara* distributor.

Baccara reserves the right to alter, modify or redesign its products, pricing and guarantee at all times without creating any liability for the obsolescence of customer inventory of such parts or products.

This manufacturer guarantee policy may apply differently in different countries.

Contact information

FACTORY AND HEAD OFFICE Baccara Automation Control

Kvutzat Geva, 18915, Israel

Tel: 972 4 6535 960 Fax: 972 4 6531 445

E-mail: baccara@netvision.net.il

Web Site: www.baccara.co.il





